

## **Mechanical Edge-of-Dock Leveler**



## **Dynamic Capacities**

20000; 30000 and 35000 lb.

66",72",78" and 84" Deck widths

96",102",108" and 114" overall width

# Valuable, Affordable and Dependable each EP Mechanical Edge-of-Dock Leveler

Offering a range of lengths, widths, and dynamic capacities, the Edge-of-Dock leveler combines rugged durability with a competitive price. Edge-of Dock Levelers provide an operating range of 5"above dock, with a minimum lip projection of 12 3/4" and an overall span of 27 3/4". Broad center plate and lip are constructed of 55000lb. minimum yield steel tread plate. Grease fittings on continuous lip hinge are standard with each unit.







Torsion Spring



Pushover Bar



Barlift



Bump Block & Molded Cord Rubber


#### STANDARD FESTURES

- Centerplate and lip are constructed of 55000lb. Minimum Yield Steel Tread Plate.
- Formed, plate steel Bump Blocks and steel faced molded cord Rubber Bumpers protect dock face and Leveler from truck damage.
- Continuous Hinge Design with Grease Fittings included as standard with each unit.
- Torsion Spring Design allows simple, precise adjustment.
- Steel Rivets located at either end of the center plate hinge provide easy, forklift installation.
- Leveler raises and extends smoothly onto truck bed with use of convenient Bar Handle.
- Unit is easily recycled with truck in position and automatically returns to stores position upon truck departure.
- Stronger Rib reinforcement underneath the center plate.
- Flat Models available for pallet jack operation.

#### **SPECIFICATION**

#### Mechanical Edge-of-Dock Leveler (inch)

Model		EOD20-BL66 EOD25-BL66 EOD30-BL66	EOD20-BL72 EOD25-BL72 EOD30-BL72	EOD20-BL78 EOD25-BL78 EOD30-BL78	EOD20-BL84 EOD25-BL84 EOD30-BL84
Capacity		20000/25000/30000lbs	20000/25000/30000lbs	20000/25000/30000lbs	20000/25000/30000lbs
length	Α	15"	15"	15"	15"
Span	В	27 3/4"	27 3/4"	27 3/4"	27 3/4"
Deck width	С	66"	72"	78"	84"
Overall width	D	96"	102"	108"	114″
Travel	Up	5"	5"	5"	5"
	Down	5"	5"	5 <b>"</b>	5"

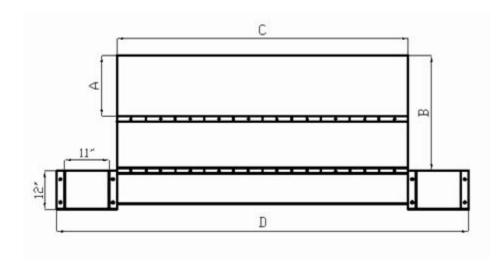

### **SIMPLE OPERATION**

Lift the bar up from the stored position. The bar will halt angled towards the truck. Then pull the bar handle back and down towards you. The barlift will automatically lock into position.

Pull the bar up and forward.

Lip automatically rides forward onto truck bed.

To prevent damage to the bar, return it to the stored position.